


## TROUBLE SHOOTING

### 1. Problem: Shade will not stay down.

**Cause:** Because the shade was fabricated primarily in the closed position, the fabric may want to spring up.

**Repair:** With clean hands, gently pull down on a section of cells to relax the pleats (see diagram below). Repeat with another section of cells until the fabric is sufficiently relaxed. Do not tightly stack the shade for 24 hours.

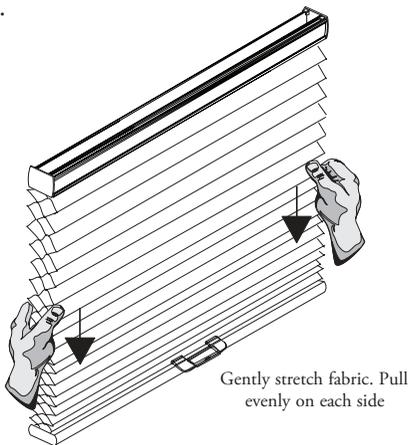

Gently stretch fabric. Pull evenly on each side

### 2. Problem: Fabric billows out when shade is raised.

**Cause:** Fabric can take a set when stretched out for extended periods of time.

**Repair:** Raise the shade very slowly to allow the retraction mechanism to overcome the force of the stretched fabric.

## CHILD SAFETY

### WARNING



Cords on window covering products present a potential strangulation hazard.



For child safety, consider cordless alternatives or products with inaccessible cords.



### ADVERTENCIA




Las cuerdas y cadenas y persianas presentan un peligro de estrangulación.



Para la seguridad de los niños, considere alternativas sin cuerdas o productos con cuerdas y cadenas inaccesibles.

# HONEYCOMB STANDARD AND TOP-DOWN/BOTTOM-UP CORDLESS SHADES

## INSTALLATION & OPERATING INSTRUCTIONS

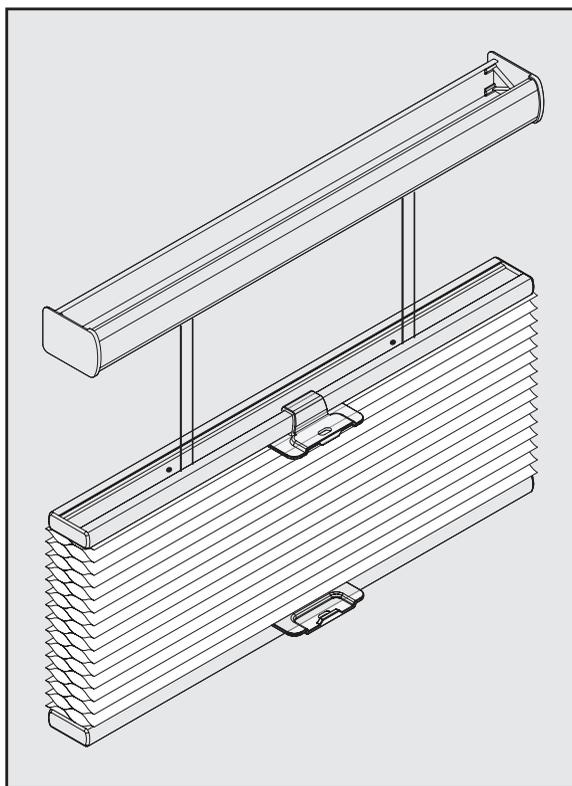


## TDBU CORDLESS SHADE BASICS


A few simple tools are required:

- Measuring tape
- Power drill, drill bits
- Hex head and/or Phillips driver bit
- Pencil

 
Additional fasteners other than those sent with your shade may be required depending on the mounting surface. Wallboard and plaster require the use of anchors such as expansion or toggle bolts. Brick, tile or stone need special plugs and drill bits. Remember to always pre-drill holes in wood to avoid splitting.




Standard Mounting Bracket

 

Optional Extension Bracket

 

Optional Spacer Block

 

Optional Hold Down Bracket

## BRACKET INSTALLATION

Shades are shipped with the required number of brackets for proper installation. End brackets should be located with the edge of the bracket 3" from either end. Depending on the width of the shade, additional brackets may be necessary, evenly spaced between the two end brackets.

For shade widths of:	Use this number of brackets:
Up to 40"	2
40" to 72"	3
72" to 84"	4
84" and up	5

Using the Installation Bracket as a template, measure to the edge of the bracket and mark the hole locations with a pencil for drilling. When mounting brackets, make sure they are in line and level.

**Brackets must be in line and level.**

Shim brackets on inside mounts if necessary. The headrail must be level for the shade to operate properly.

**Inside or Ceiling Mounts**

Use the top bracket holes

**Wall or Outside Mounts**

Use the rear bracket holes.



 
Top Hook

Note: Release tab is at the bottom of the bracket

Top Hook


## Outside Mount with Spacer Block

Optional Spacer block will project bracket 3/8".




Sidemount with extension bracket

## Outside Mount with Extension Bracket

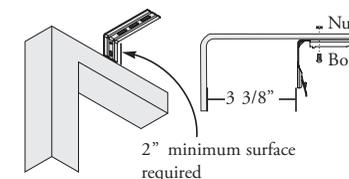

2" minimum surface required

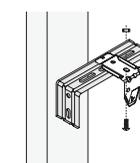


## INSERTING THE HEADRAIL

First, lower the middle and bottom rail about an inch. This will help keep the fabric from getting caught between the brackets and the headrail.

Position the headrail with the front lip (A) resting on the top hooks of all the brackets. Make sure that no fabric is pinched between the brackets and the headrail.

Push the bottom of the headrail firmly upwards and towards the window until the groove at the bottom of the headrail snaps into place, (B) as shown.

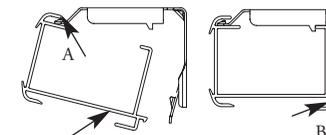


Push here upwards and towards the window

## REMOVING THE HEADRAIL

To remove a shade, insert a screwdriver between the headrail and the bottom back of the bracket (tab which extends out slightly from each bracket).

Gently pry the screwdriver to release the bracket from the headrail. Take care not to damage the painted finish of the headrail.


As you release the brackets, support the headrail to keep it from falling.

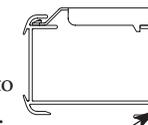

Insert screwdriver here and gently pry


## INSTALLING THE HANDLE

 Locate the center of the bottom rail. Gently lift fabric out of the way. Hook the top of the handle over the front lip on the bottom rail. Rotate handle down until it snaps into place.



## OPTIONAL HOLD DOWN BRACKETS

Optional Hold Down Brackets are mounted with the supplied screws. With the shade at its proper drop, place the pin of each Hold Down into the hole in each End Cap and mark the screw holes. Make sure the pins are level and aligned. Raise the shade, then screw the Hold Down Bracket into the mounting surface.

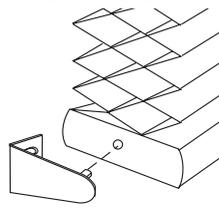

## OPERATION




To lower the shade, pull down on the handle which is secured to the middle or bottom rail. To raise the shade, push the middle and bottom rail up. The shade will hold at any position when the middle or bottom rail is released.

This product should be operated from the center of the middle or bottom rail.

**Be sure to raise the shade slowly and steadily to allow the shade enough time to stack evenly.**

Use the handle when raising lowering shade for better support and smoother operation.

For out-of-reach operations, as optional extension pole should be used.

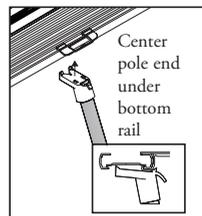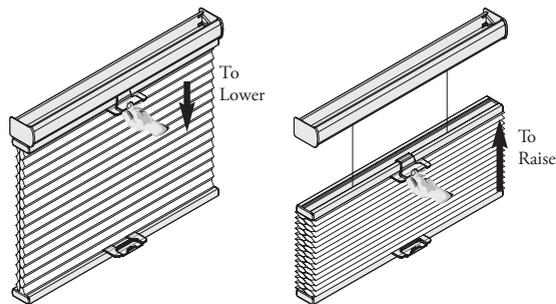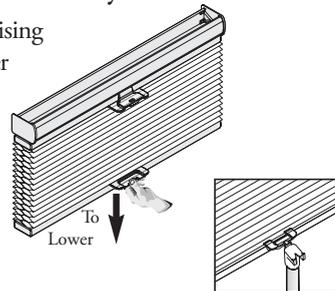

## Adjust length or equalization on shades

NOTE: Only adjust one cord at a time. Disconnecting more than one cord may allow the cords to retract into the headrail.

If the shade length and equalization is satisfactory, simply trim the excess cord hanging below the bottom rail.

If adjustments are necessary, pull the excess cord at the bottom of the shade down until the Bottom Rail Plug is released (fig. A). Push the cord up or down through the Bottom Rail Plug (figs. B & C).



If the cord needs to be longer, slide the top end of the cord up into the wedge and slide the wedge down to take up slack.

If the cord needs to be shorter, slide the top end of the cord down into the wedge and slide the wedge up to take up slack.

Adjust the position of the plug as necessary (fig. D).

Feed the cord back through the Bottom Rail Pocket.

When bottom rail adjustments have been made, trim the excess cord hanging below the bottom rail.

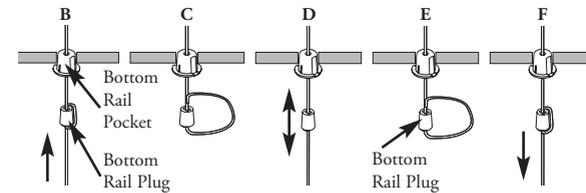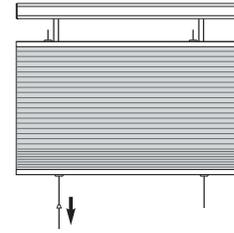

## CLEANING AND CARE

The Honeycomb fabric is easy to care for. Regular dusting with a feather duster or vacuum cleaner brush is recommended. Most stains can be blotted with a damp sponge and mild detergent. For problem stains, the shade can be removed from the Installation brackets and soaked in warm water.


Important: DO NOT immerse headrail in water. When damp, raise shade tightly to re-crisp pleats. Before using anything stronger than mild detergent and lukewarm water, test an unobtrusive corner of the shade. If you have any questions, call your dealer for advice.

## STANDARD CORDLESS SHADE BASICS

### ATTACHING THE BRACKETS

Larger shades may require additional brackets. Space additional brackets equally and align with the end brackets.

Note placement of components inside headrail. Brackets must be placed in the open areas between components to avoid interfering with the operating mechanism. Mark these locations on top of window frame for inside mount or on wall for outside mount.

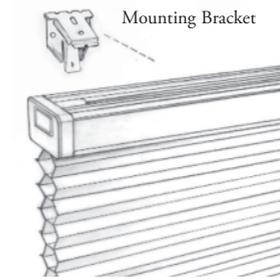


### Inside Mount

Mount brackets to top or back of window frame, 1" – 6" in from edge of frame. Make sure brackets are aligned with one another.




### Outside Mount

Center shade over window opening at desired height. Mark the position of the headrail ends on the wall. Attach mounting brackets to the wall, 1" – 6" in from the marks, making sure brackets are aligned with one another.

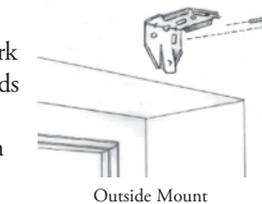


### Mounting with Extension Brackets

If you need to project the shade out from the mounting surface, use the supplied nuts and bolts to attach mounting brackets to the desired position in the extension bracket. With pliers, bend and break the unused part of the extension bracket. Attach extension brackets to mounting surface, making sure brackets are spaced as noted above.

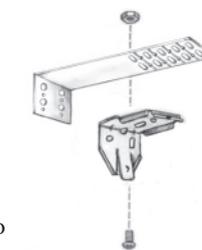


## ATTACHING THE BRACKETS

Center shade in window opening. Insert the front clip of the bracket into the front groove of the rail. Push the rail back and up until the back clips of the bracket snap into the back groove of the rail.

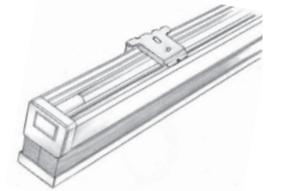

## ATTACHING THE OPTIONAL HOLD-DOWN BRACKETS

Optional Hold Down Brackets are mounted with the supplied screws. With the shade at its proper drop, place the pin of each Hold Down into the hole in each End Cap and mark the screw holes. Make sure the pins are level and aligned. Raise the shade, then screw the Hold Down Bracket into the mounting surface.

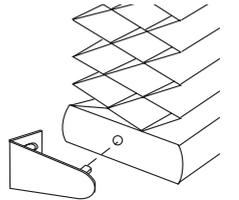

## OPERATING YOUR SHADE

Grasp the handle of the shade and raise or lower to desired position. See Trouble Shooting for more information.

## REMOVING YOUR SHADE

Using your fingers or a screwdriver, press tab on back of each bracket to release the shade.

