

## ST50 Programming Instructions

**Note:** These instructions start as if the shade has never been programmed. If the shade has been previously programmed, or needs to go back to factory default (so you can start from the beginning) please follow the reset directions at the bottom of the page, before starting the programming instructions.

**Disconnect power to all shades except the one you are programming. Program one shade at a time. If you have “hardwired” these motors, all other motors need to be disconnected for programming.**

1. Power up the shade, select the desired channel and push the up and down buttons together. (The shade will jog.)
2. Use the arrow buttons to check the direction of movement (make sure that up is up and down is down).
3. If the directions are not correct (backwards) press and hold the “my” button until the shade jogs. Test the shade again with the arrows; it should be correct at this point.
4. Use the up arrow to move the shade into the up position.**(The upper limit must be set first)**. When this position has been reached, move on to the next step.
5. Press and hold the “my” button and the down arrow together. When the shade begins to move, release the buttons. (You will need to stop the shade with the “my” button and do the final adjustments with the arrow buttons).
6. Once the desired down limit has been reached, press the “my” button and the up arrow together. When the shade

- begins to move, release the buttons and the shade will continue to go up until it reaches the upper limit.
7. If the shade has stopped where you want it, press and hold the “my” button until the shade jogs; then flip the remote over and press the programming button on the back of the remote and the shade will jog.
  8. You have just completed programming your shade.

**Note: If you are using a decoflex wall switch, substitute the “stop” button for the “my” button. The programming button is a paper clip size hole next to the down arrow.**

### **Resetting to factory default**

1. The ST50 requires a series of power cuts to set it back to factory default. The timing is important for the reset so make sure to actually time it.
2. Un-plug the shade from power for 2 seconds.
3. Plug in power for 10 seconds.
4. Un-plug the shade from power for 2 seconds
5. Plug in power, shade will start to move.
6. When the shade stops, press and hold the program button on the back of the remote until the shade jogs twice. **DO NOT RELEASE THE PROGRAMMING BUTTON UNTIL THE SHADE JOGS TWICE. IF YOU RELEASE BEFORE THE TWO JOGS, YOU WILL HAVE TO START OVER.**
7. The shade is now back to factory default.