

# TimberBlindMetroShade

## 2" Tilt motor Programming



Caution: When setting limits on tilt products, be advised that setting the closure of the slats too tight can result in the breaking of the strings/ladders. Please use caution when adjusting the limits.

These directions are for programming a motor from a factory default state. If the blind has been programmed and other adjustments need to be made, additional directions will be at the end of this document. Please read entire document before programming.

### STEP 1 To "pair" a remote to a blind

- 1.Press the programming button on the motor for 1 jog.
  - 2.Press P2 on the remote. (Blind will jog)
  - 3.Press P2 on the remote. (Blind will jog)
  - 4.Press up or down arrow. ( Blind will jog)
- The remote will now work with the blind.

### STEP 2 Limit Setting Mode

- 1.Press P2 on the remote. (Blind will jog)
  - 2.Press the up arrow on the remote. (Blind will jog)
  - 3.Press P2 on the remote. (Blind will jog)
- You can now set the limits.

### STEP 3 Setting limits

- 1.Move blind to the desired Upper/Lower position, stop the blind (Blind will beep) and continue to hold stop until the blind jogs. The Limit is now set.
- 2.Move blind to the desired Upper/Lower position, stop the blind (Blind will beep) and continue to hold stop until the blind jogs. The limit is now set.
- 3.If limits need to be adjusted after setting, go back to "Limit setting Mode" and follow "Setting-Limits"

### STEP 4 Setting 3rd Limit, "Intermediate Position"

- 1.Move blind to the desired intermediate position.
  - 2.Press P2 on the remote. (Blind will jog)
  - 3.Press stop on the remote. (Blind will jog)
  - 4.Press stop on the remote. (Blind will jog)
- The intermediate stop is set.  
To activate 3<sup>rd</sup>limit, press the stop button for approximately 2sec. Blind will move to the set position.

### STEP 5 To remove 3<sup>rd</sup> limit, "Intermediate Position"

- 1.Press stop button for about 5 sec, blind will move to intermediate position.
  - 2.Press P2 on the remote (Blind will jog)
  - 3.Press stop button on the remote. (Blind will jog)
  - 4.Press stop button on the remote. (Blind will jog)
- 3<sup>rd</sup> limit is now removed.

### STEP 6 Activate Tilt Function

- 1.Press P2 on the remote. (Blind will jog)
  - 2.Press the up arrow on the remote. (Blind will jog)
  - 3.Press the down arrow on the remote. (Blind will jog)
- Now the slats on the blind will tilt by tapping the arrows on the remote. Holding the arrows longer will make the blind operate in regular mode.

To remove tilting function, use same process as activating.

### STEP 7 Adding a remote

- Start with the remote that currently works the blind.
- 1.Press P2a (Blind will jog)
  - 2.Press P2a (Blind will jog)
  - 3.Press P2b (Blind will jog)
- P2a = Working remote, P2b = Remote to add

### STEP 8 Removing a remote

- 1.Press P2a
  - 2.Press P2a
  - 3.Press P2b
- P2a = Remote to keep, P2b = Remote to delete

### STEP 9 Replacing a lost remote

If blind has been previously programmed but the remote has been lost:


- 1.Press the programming button on the motor for 1 jog.
  - 2.Press the up & down arrows on the new remote.(Blind will jog)
- The new remote has been added to the blind. The blind will have the same settings as with the previous remote.

### What motor jogs mean

- 1.A single jog = To "pair" a remote to a new motor or replace a lost remote.
- 2.Two jogs = Reverse motor direction.
- 3.Three jogs = Complete factory reset.

### Additional Information:

Location of P2 on remote

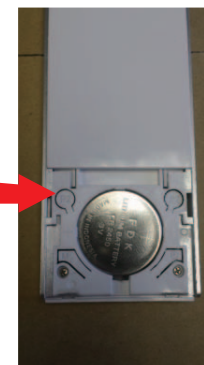

Location of reset button

