 


WAND MOTORIZATION


Programming
and Operating Guide

HORIZONTAL BLINDS
ROLLER SHADES

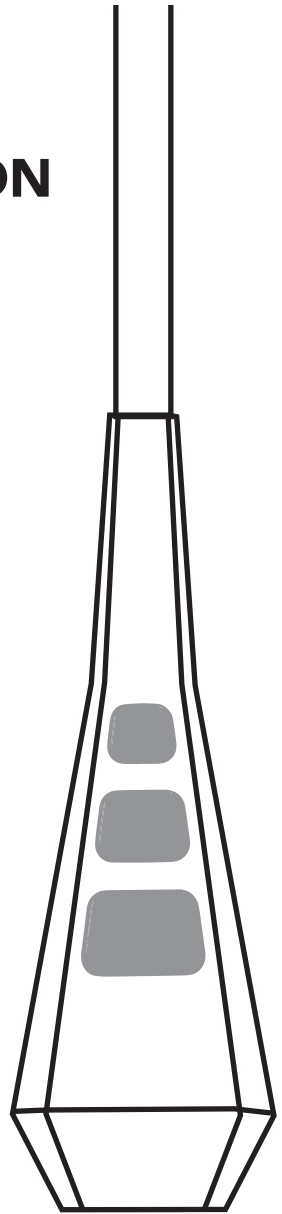

WAND MOTORIZATION BASICS

Button Identification

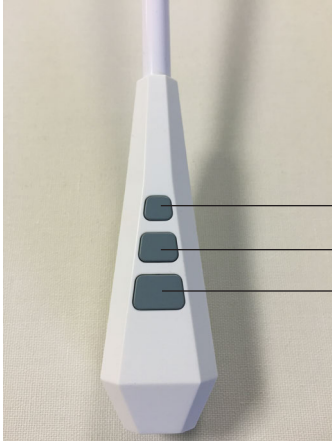


Front View of Wand

There are 3 blind/shade operation buttons located on the front of the wand (Up, Stop, and Down).

- Up Button
- Stop Button
- Down Button

PLEASE NOTE: Wand motorization on horizontal blinds will tilt (open/close) slats only.

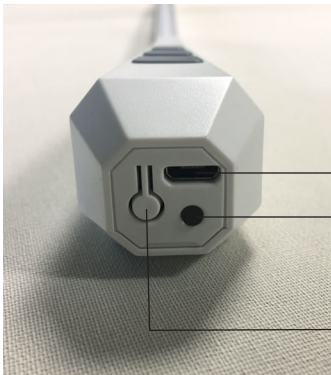

Bottom View of Wand

The Programming Button, charging port and recharge indicator light are located on the bottom of the wand.

- Charging Port
- Recharging Indicator Light
Red=Charging
Green=Fully Charged
- Programming Button

WAND MOTOR PROGRAMMING

Getting Started

IMPORTANT: Your motorized blind/shade has come to you with the limits set. However, if you need or would like to change the limits please follow the instructions below.

CAUTION: When setting limits on tilt products, be advised that setting the closure of the slats too tight can result in the breaking of the strings/ladders. Please use caution when adjusting the limits.

STEP 1 Setting Upper Limit

Move blind/shade to desired limit and press stop. Shade will automatically go into step mode for final adjustments. When desired limit is reached, press the programming button for one beep.

THE UPPER LIMIT IS NOW SET.

STEP 2 Setting Lower Limit

Move blind/shade to desired lower limit and press stop. Shade will automatically go into step mode for final adjustments. When desired limit is reached, press the programming button for one beep.

THE LOWER LIMIT IS NOW SET.

The shade can be adjusted to any drop but will never pass the lower and upper limit settings.

WAND MOTOR CHARGING

Charging the Motor

The lithium ion battery is charged via a USB power cable that plugs into the end of the wand.

Plug the recharger into the micro USB charging port on the bottom of the wand. The other end will plug into any USB power adapter.

When the battery is fully charged, the Recharging Indicator Light will glow green.



**Front View of Wand
Power Cable Attached**

Tips & Troubleshooting

Clearing the Limits

Press and hold the setting button for 4 beeps.

Reverse Motor Direction (Horizontal Blinds)

Press and hold Stop + Setting Button for 4 beeps.

Wand will not operate the shade

Re-charge the battery; see instructions above

If you were able to re-charge the battery, the wand should now operate your shade.