


CORDLESS FAUX WOOD INSTALLATION INSTRUCTIONS

1

TOOLS

GETTING STARTED - TOOLS NEEDED FOR INSTALLATION

Rechargeable Drill with 1/4" Hex Bit / Phillips Screwdriver / Pencil / Tape Measure

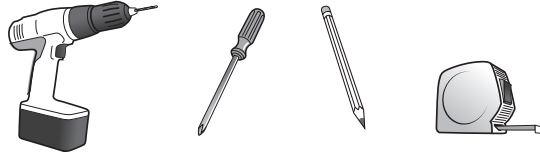

2


UNPACKING
THE PARTS

Locate the parts and brackets in hardware box.
The quantity will vary with blind size.

Hold-down parts will only be sent for blinds that have
requested this option.

Center Support Bracket will only be sent for blinds
over 37" wide.


Installation Brackets



Valance Clips



Center Support



End Cap for Hold-downs



Hold-down Bracket




Installation Screws




3

BRACKET
PLACEMENT


Left Bracket



Right Bracket

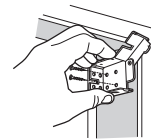


OR

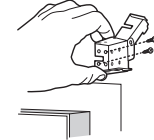

Inside mount

Outside mount



IF APPLICABLE:
Center Support Bracket

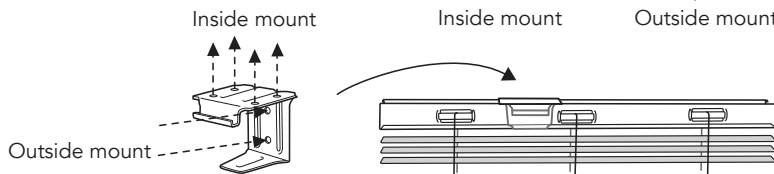


4

VALANCE CLIPS
& WAND


Attach Valance Clips

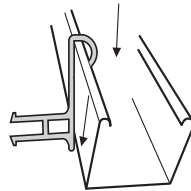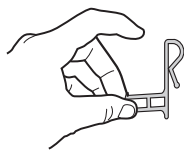

Clip on to
Headrail

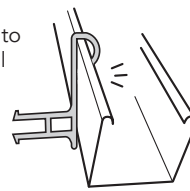

Assemble the Wand






Snap together where applicable.


5

FINISHING
UP


Slide into Brackets

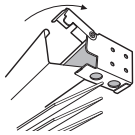



Attach Wand

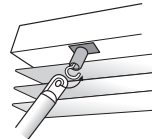

Install Valance

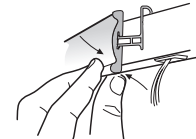

IF APPLICABLE:
Hold-down brackets



OR



6

OPERATING
INSTURCTIONS

Raise or lower the blind by lifting or lowering the bottom rail to the desired height.

PLEASE NOTE: This product is made up to +6" of ordered height. Blinds over 84" may include up to 10" of additional height. This is normal for this product and not considered a manufacturing error or defect.

Open or close the blind slats by turning the wand until the slats are opened or closed to the desired amount.